

JAX-S7

SERVICE MANUAL



US Model

Ver 1.0 2003.05

- JAX-S7 is composed of the following models.
As service manuals are issued for each component model, please refer to them.

COMPONENT MODEL NAME

	JAX-S7
COMPACT DISC DECK RECEIVER	CX-JS7
SPEAKER SYSTEM	SX-JS7

SPECIFICATIONS

Power requirements	120 V AC, 60 Hz
Power consumption	160 W
Power consumption in standby mode	With ECO mode on: 0.25 W With ECO mode off: 25 W
Dimensions (W × H × D)	280 × 328 × 437 mm (11 1/8 × 12 15/16 × 17 7/32 in.)
Weight	10.2 kg (22 lbs 8 oz)

Supplied accessories

Remote commander (1)
Batteries (2)
FM antenna (1)
AM antenna (1)

Design and specifications are subject to change without notice.

ACCESSORIES

Part No.	Description	Remark
1-477-842-21	COMMANDER, STANDARD (RM-Z20001)	
1-501-374-92	ANTENNA, LOOP (AM)	
1-754-243-11	ANTENNA (FM)	
4-245-998-01	COVER, BATTERY (for RM-Z20001)	
4-246-840-71	MANUAL, INSTRUCTION (ENGLISH, SPANISH)	

MINI Hi-Fi COMPONENT SYSTEM

9-877-264-01
2003E05-1
© 2003.05

Sony Corporation
Home Audio Company
Published by Sony Engineering Corporation



REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

[illegible]